



 
EN INSTALLATION
INSTRUCTIONS

> logato.se


VERSATILE SYSTEM

ARIA ADURO


3 diameters: 125 / 160 / 200 mm

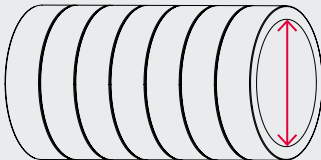

Inner diameter
125 mm

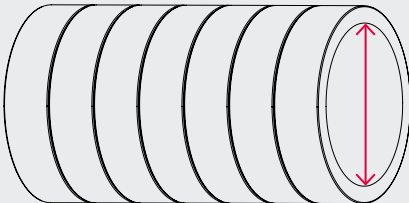 

Inner diameter
160 mm

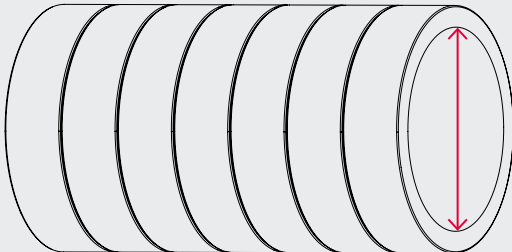 

Inner diameter
200 mm

CONTENTS



INSTALLATION INSTRUCTIONS

- 04 PIPE 1 m**
 - 04 Easy cutting
 - 05 Cutting angle
 - 06 Connecting

- 07 MHRV UNIT ADAPTER**
 - Connecting

- 08 CONNECTOR**
 - Connecting

- 10 MOUNTING BRACKET**
 - 10 Connected in series or in parallel
 - 11 Installation
 - 12 Arrangement

- 13 REDUCER 125/160/200 mm**
 - 13 Trimming
 - 15 Installation

- 16 BEND 45°**
 - Installation

- 17 AIR INTAKE / OUTLET GRILLE**
 - 17 Recommended wall opening diameter
 - 18 Installation – recommendation

 
 
- 19 DAMPER AND TEE**
 - Installation – recommendation

PIPE 1 m

ARIA
ADURO

ARIA ADURO


● ○ ○ Easy cutting

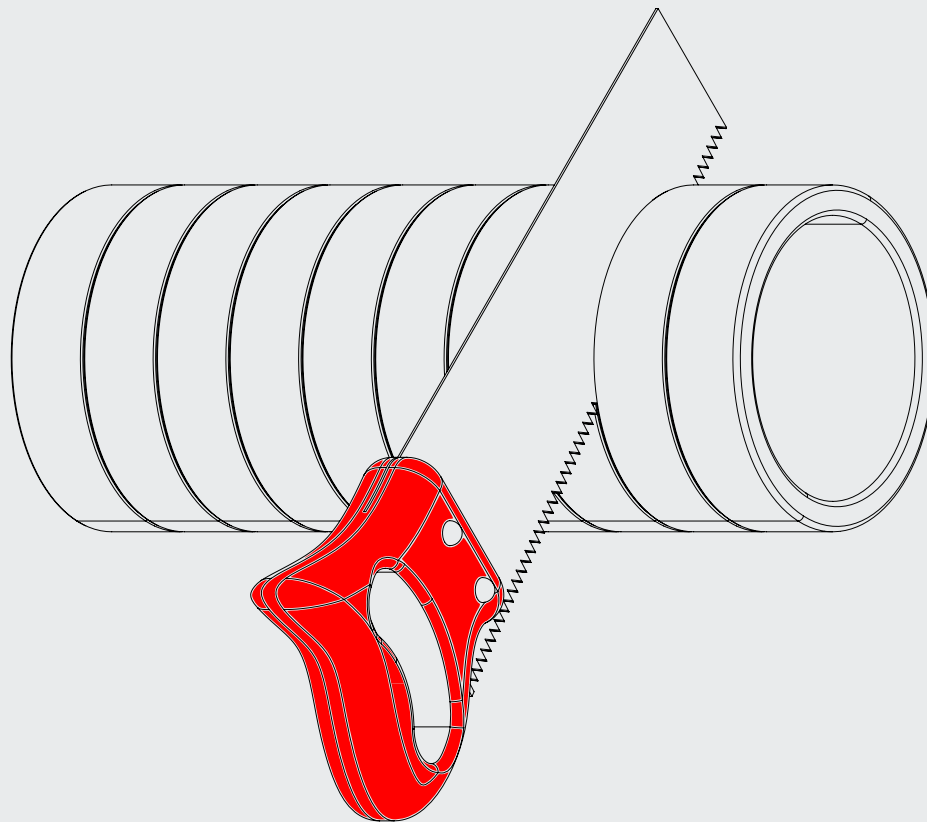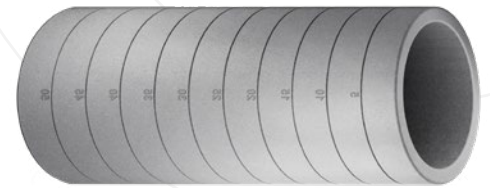

PIPE 1 m

ARIA ADURO


 
● ● ○ Cutting angle

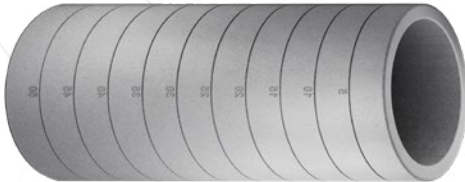

PIPE 1 m

ARIA ADURO

  ● ● ● Connecting

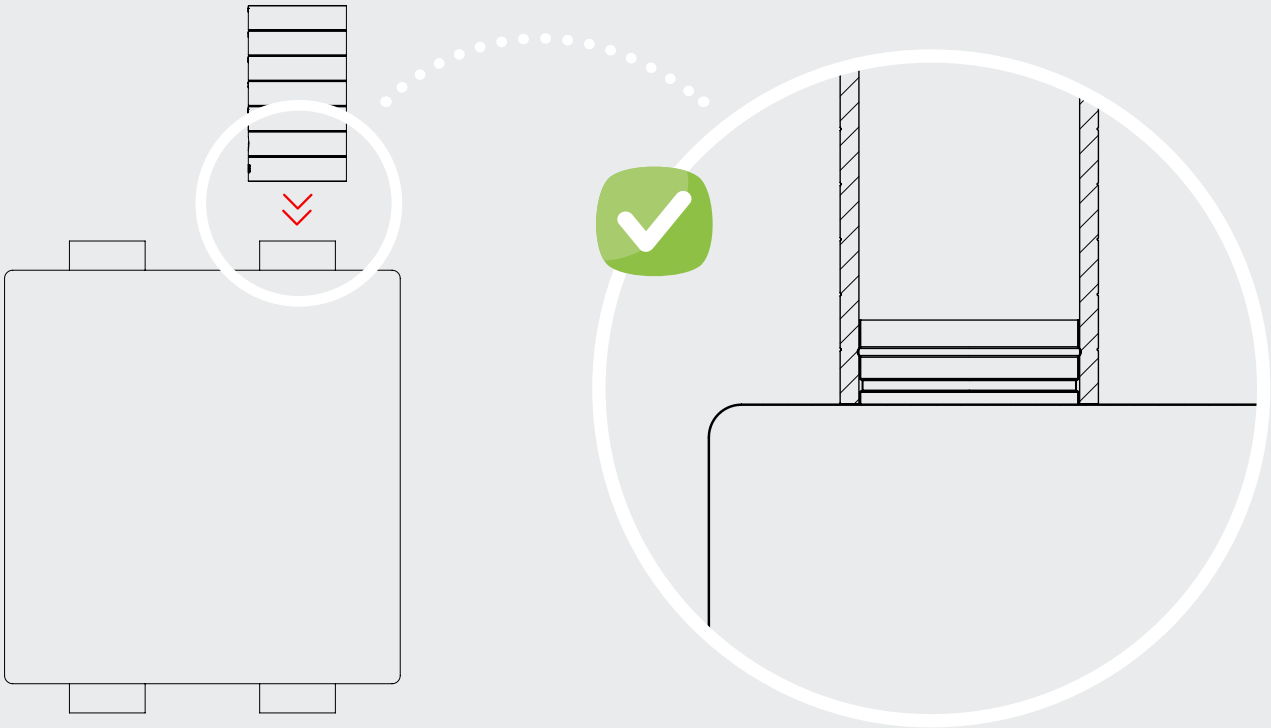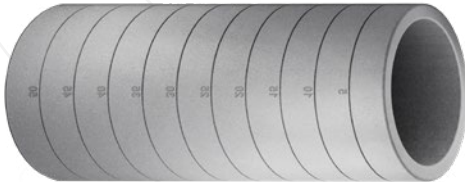

MHRV UNIT ADAPTER

ARIA ADURO

ARIA
ADURO

● Connecting

 


160 mm

- ① ADURO 160 mm
- ② **ADAPTER 150/160**
- ③ Ø 150 mm

200 mm

- ① ADURO 200 mm
- ② **ADAPTER 180/200**
- ③ Ø 180 mm

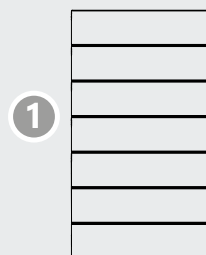



1



2



 
 
3

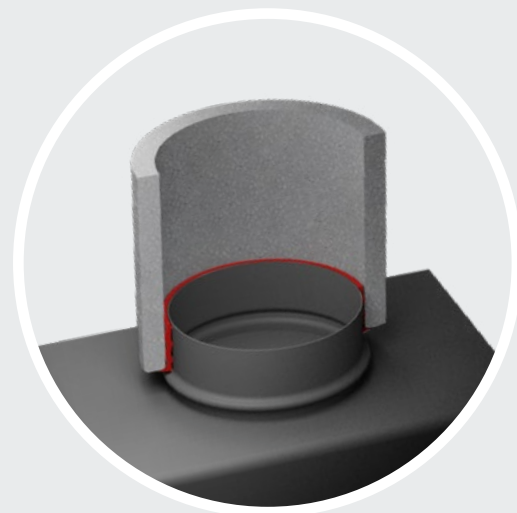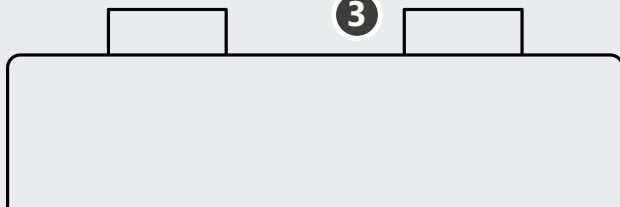

CONNECTOR

ARIA ADURO

  
● ○ Connecting

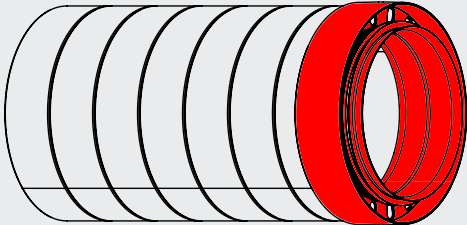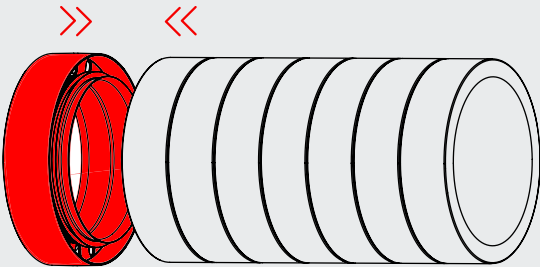

CONNECTOR

ARIA ADURO


 
● ● Connecting

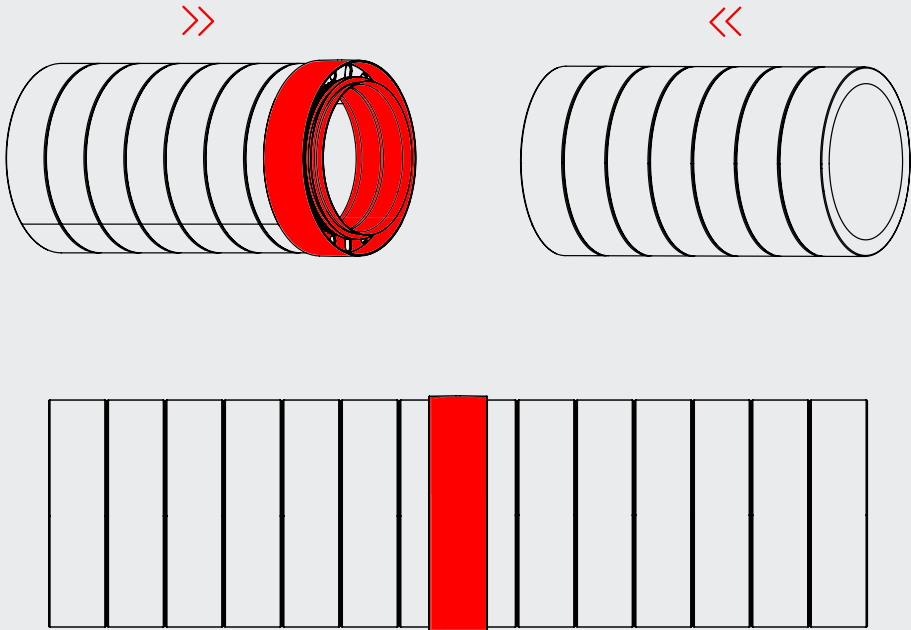

MOUNTING BRACKET

ARIA ADURO

 
 
● ○ ○ Connected in series or in parallel

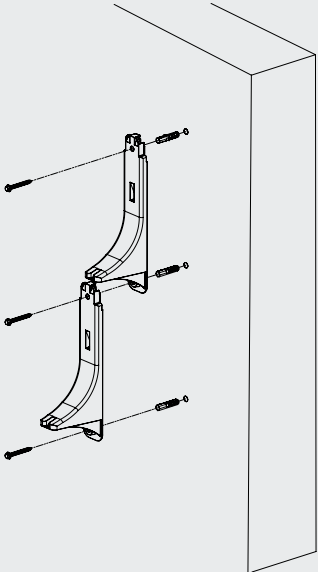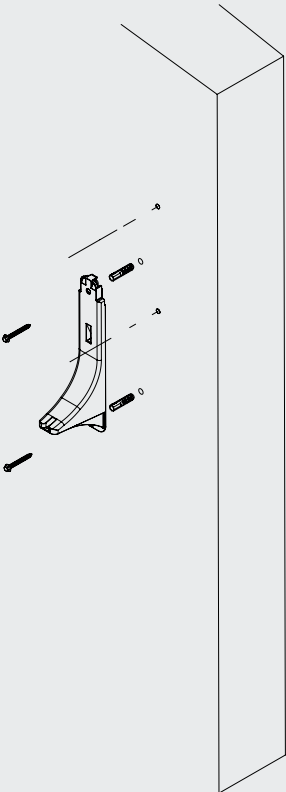

MOUNTING BRACKET

ARIA ADURO


 
 
● ● ○ Installation

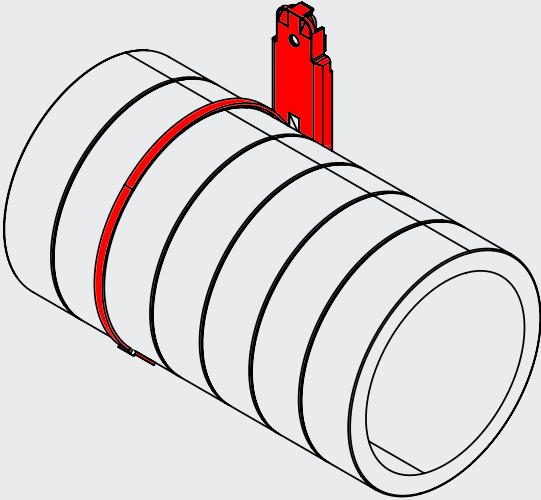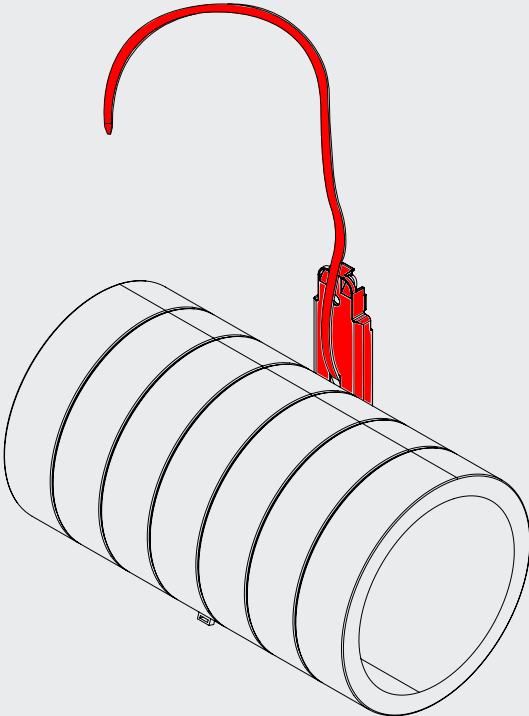

MOUNTING BRACKET

ARIA ADURO

   ● ● ● Arrangement

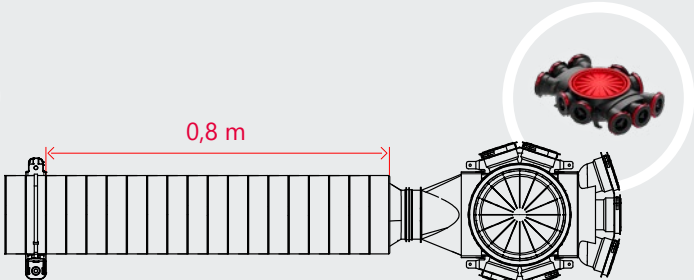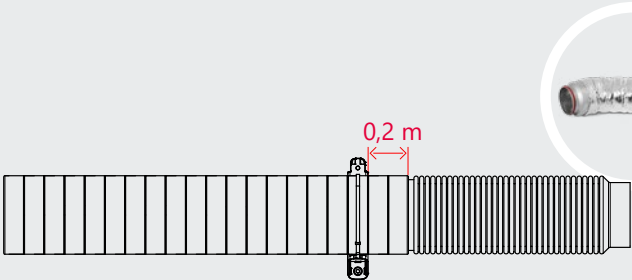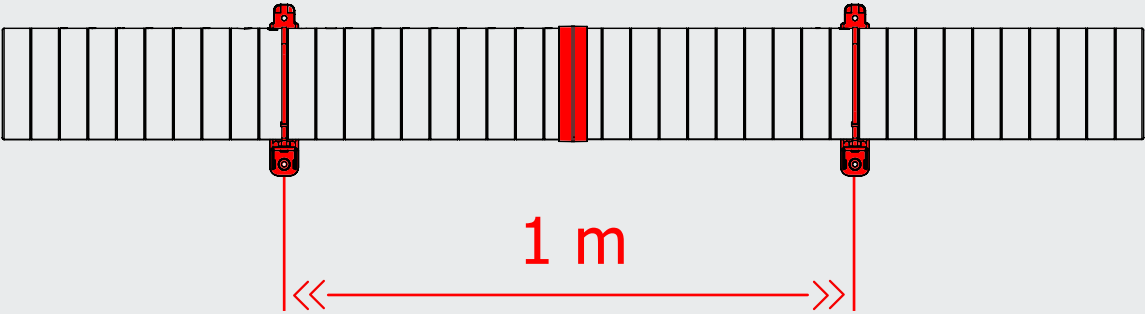


REDUCER 125/160/200 mm

ARIA ADURO

ARIA
ADURO

 ● ○ ○ Trimming

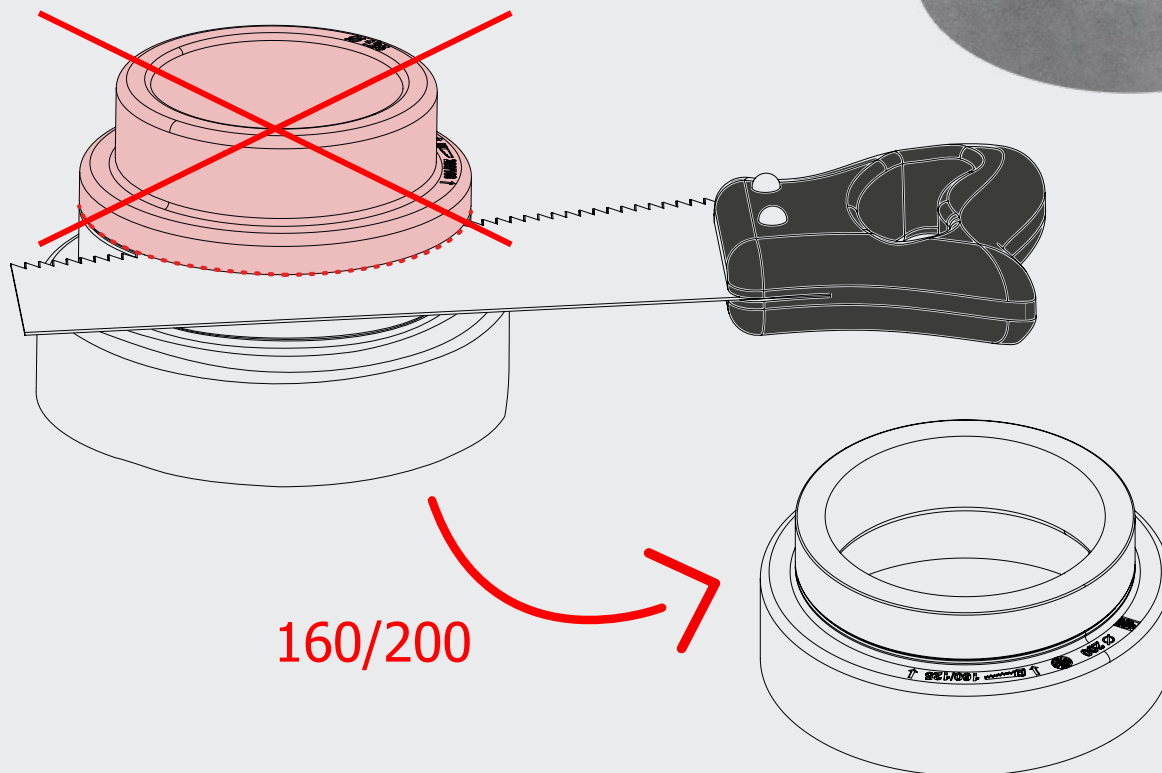

REDUCER 125/160/200 mm

 
ARIA ADURO

ARIA
ADURO

● ● ○ Trimming




125/160

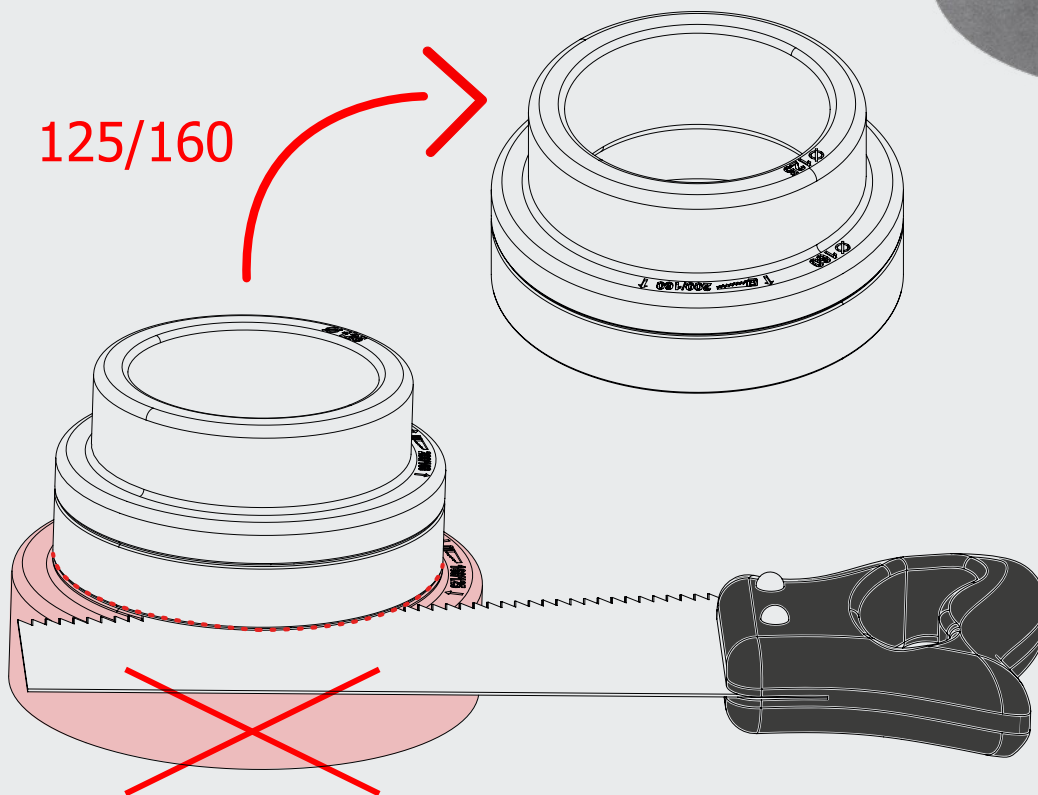

REDUCER 125/160/200 mm

ARIA ADURO

 ● ● ● Connecting

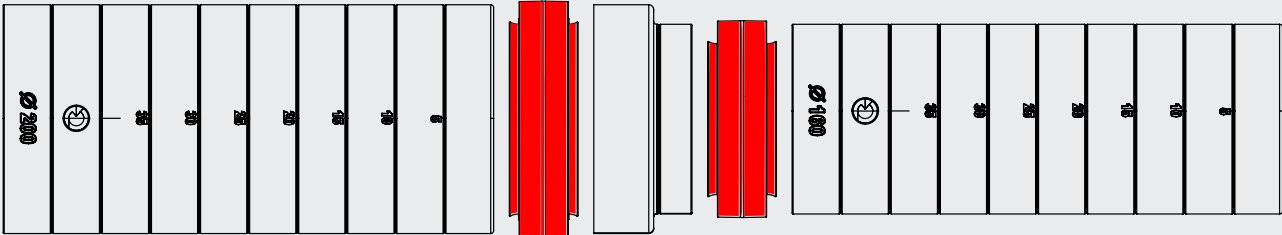


BEND 45°

ARIA
ADURO


ARIA ADURO

● Installation

 45°

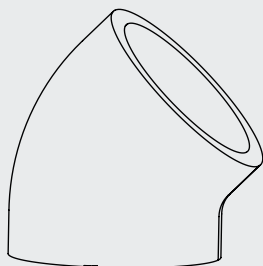

90°

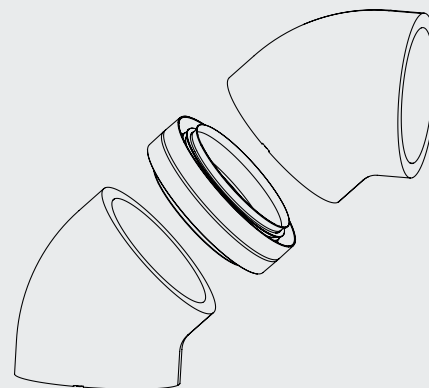 


AIR INTAKE / OUTLET

ARIA ADURO

ARIA
ADURO

 ● ○ Recommended wall opening diameter

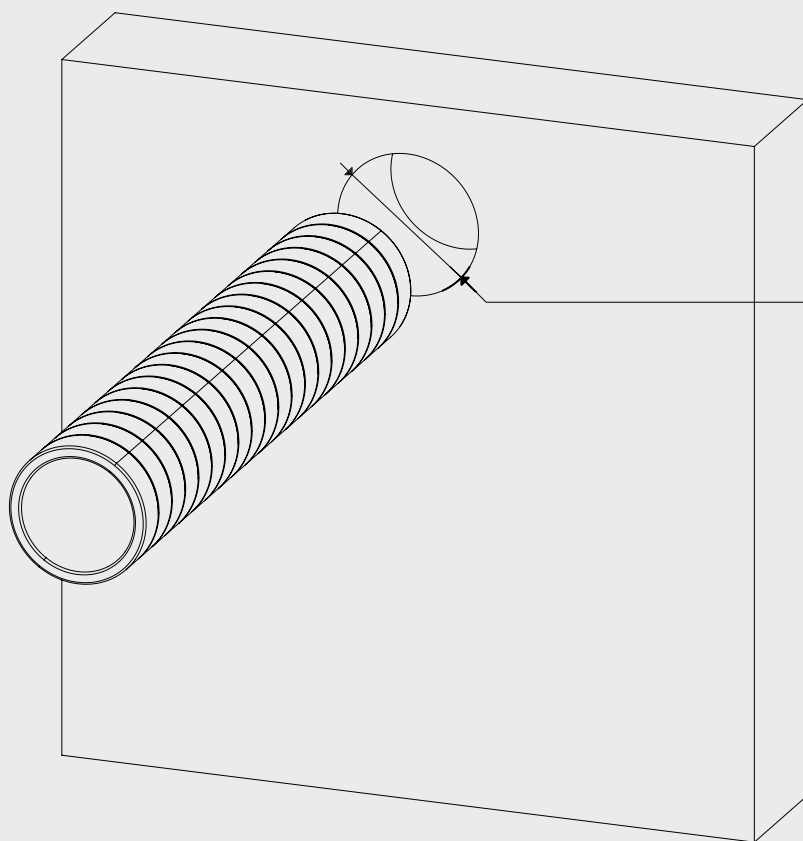

ADURO 125 mm
min. \varnothing 169

 
 
ADURO 160 mm
min. \varnothing 204

ADURO 200 mm
min. \varnothing 244

AIR INTAKE / OUTLET

ARIA ADURO

● ○ Installation – recommendation


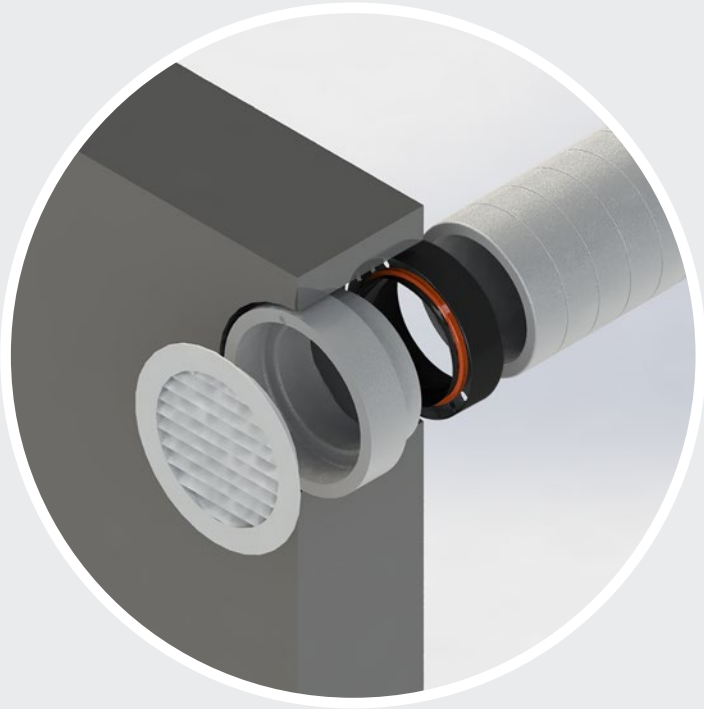
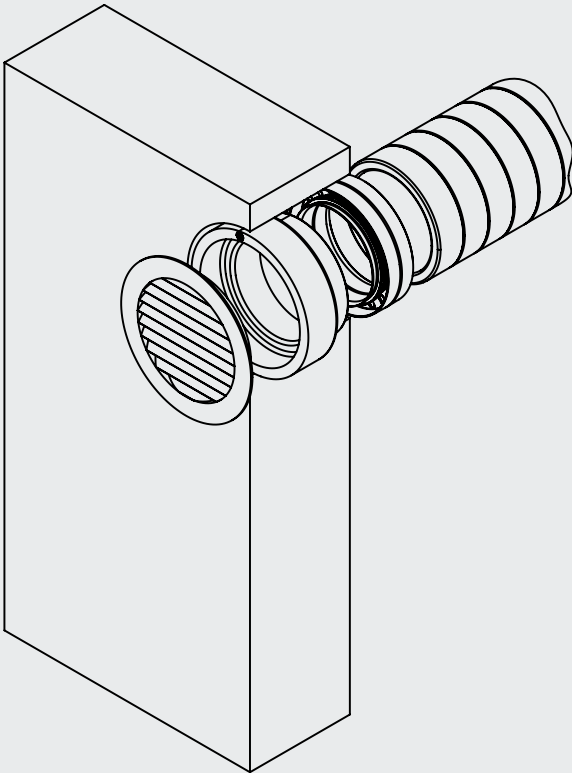


DAMPER AND TEE

ARIA ADURO


ARIA
ADURO

   - Installation – recommendation

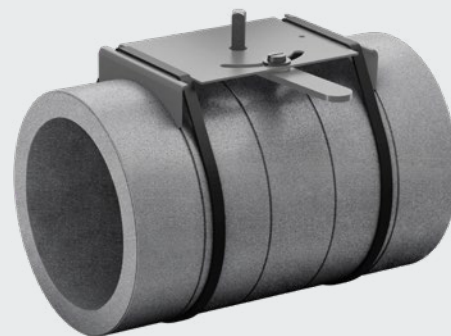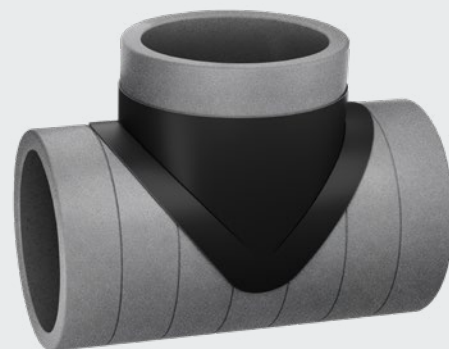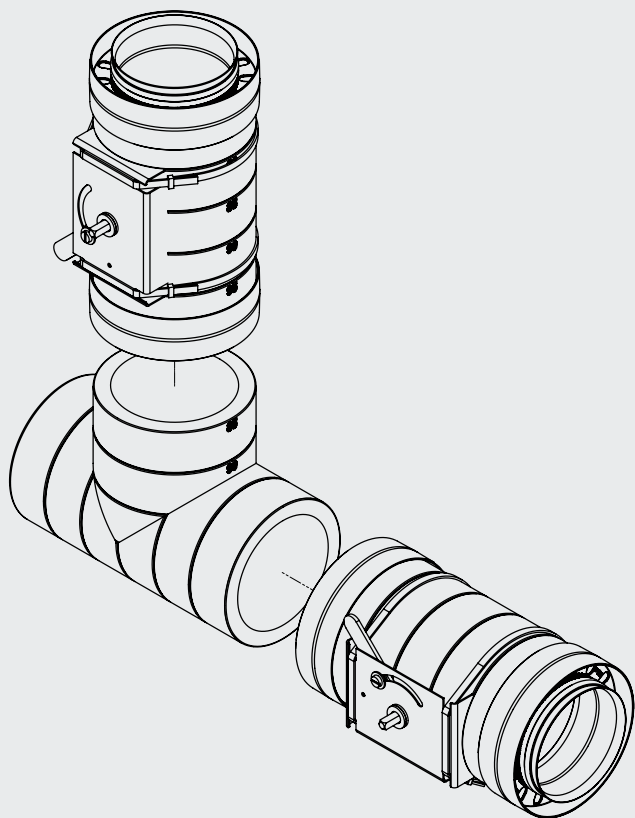

AIR DISTRIBUTION DUCTWORK

 Complete system

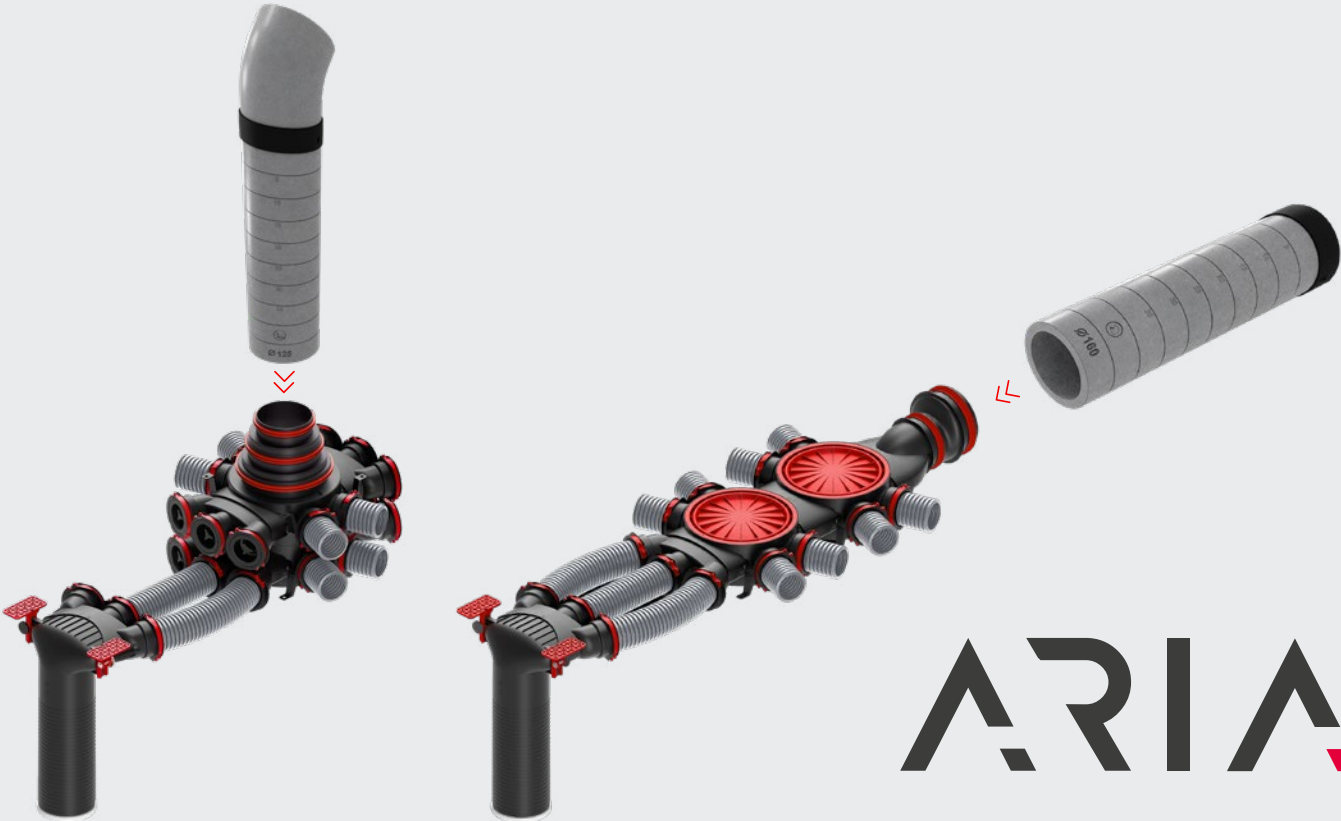

ARIA